## NSN 5975-01-590-3850

Panel Assembly Split - Page 1 of 1



l/a Init Of Measure: ea	
helf Life:  I/a Init Of Measure:  Pea	
l/a Init Of Measure: ea	
ea	
ea	
emilitarization:	
es - demil/mli	
lazmat:	

Repairability:

Yes

This is a nonreparable item. if condemned or economically unserviceable, then dispose at the level authorized replace the item.